





Tools required for servicing your PROFLEX shockabsorbers. Thoroughly clean all items before you start.

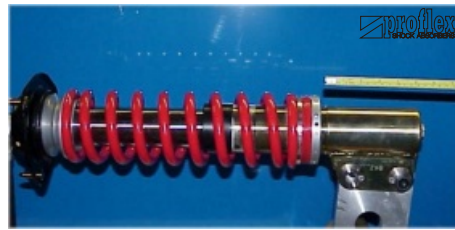

Measure the fitted length of the spring before relieving the spring tension, using the special tool provided to lower the spring platform.



Hold the piston rod with the "allen key". Now remove the 19.0 mm nut.

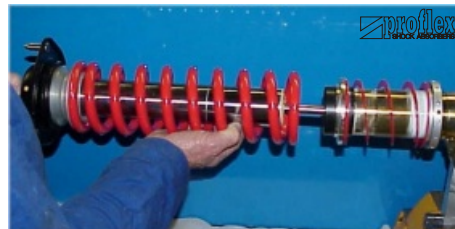

Holding the unit as shown, withdraw the insert and spring from the outer casing.



Thoroughly clean parts, grease and reassemble.



The spring and insert assembly can now be refitted to the outer casing.



Replace the bottom securing nut and tighten firmly.

Recommended grease :
Proflex Bardahl
Molykote BR 2 Plus

Job is done